 


# HAPPY JACKIE

 
## OPERATOR'S MENU V119POKER

### PART I - PLAYER'S PANEL


#### TYPE A

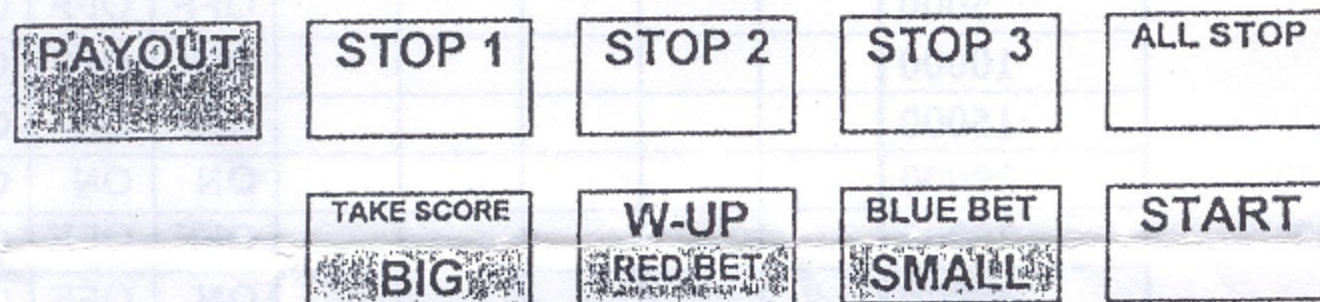

#### TYPE B

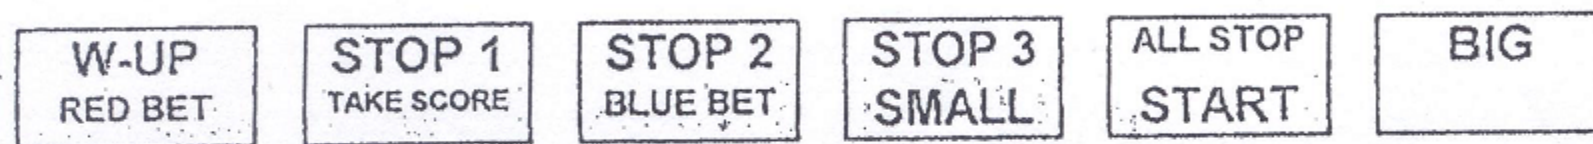

#### TYPE C

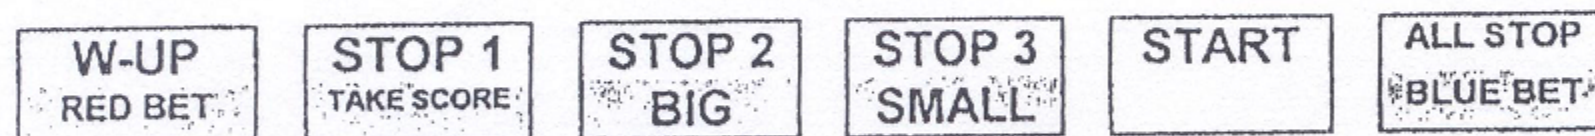 



## PART II - DIP SW. SETTING

DIP SW.1		1	2	3	4	5	6	7	8
PAYOUT MODE	MANUAL	OFF							
	AUTO	ON							
DEMO MUSIC	DISABLE		OFF						
	ENABLE		ON						
MINIMUM BET FOR FEVER GAME	1			OFF	OFF				
	8			ON	OFF				
	16			OFF	ON				
	32			ON	ON				
CREDIT LIMIT	5000						OFF	OFF	OFF
	10000						ON	OFF	OFF
	15000						OFF	ON	OFF
	20000						ON	ON	OFF
	25000						OFF	OFF	ON
	30000						ON	OFF	ON
	50000						OFF	ON	ON
	UN-LIMIT						ON	ON	ON



DIP SW.2		1	2	3	4	5	6	7	8
MAIN GAME PERCENTAGE	45%	OFF	OFF	OFF	OFF				
	50%	ON	OFF	OFF	OFF				
	55%	OFF	ON	OFF	OFF				
	60%	ON	ON	OFF	OFF				
	70%	OFF	OFF	ON	OFF				
	75%	ON	OFF	ON	OFF				
	80%	ON	ON	ON	OFF				
	83%	OFF	OFF	OFF	ON				
	85%	ON	OFF	OFF	ON				
	88%	OFF	ON	OFF	ON				
	90%	ON	ON	OFF	ON				
	92%	OFF	OFF	ON	ON				
	94%	ON	OFF	ON	ON				
	96%	OFF	ON	ON	ON				
	98%	ON	ON	ON	ON				
W-UP GAME	NO					OFF			
	YES					ON			
W-UP GAME PERCENTAGE	70%						OFF		
	90%						ON		
KEY OUT METER SETTING	1 CREDIT 1 COUNT							OFF	OFF
	10 CREDIT 1 COUNT							ON	OFF
	100 CREDIT 1 COUNT							OFF	ON



DIP SW.3		1	2	3	4	5	6	7	8
KEY IN SETTING	1	OFF	OFF	OFF					
	10	ON	OFF	OFF					
	20	OFF	ON	OFF					
	25	ON	ON	OFF					
	30	OFF	OFF	ON					
	40	ON	OFF	ON					
	50	OFF	ON	ON					
	100	ON	ON	ON					
COIN IN SETTING	1				OFF	OFF	OFF	OFF	
	2				ON	OFF	OFF	OFF	
	5				OFF	ON	OFF	OFF	
	10				ON	ON	OFF	OFF	
	15				OFF	OFF	ON	OFF	
	20				ON	OFF	ON	OFF	
	25				OFF	ON	ON	OFF	
	30				ON	ON	ON	OFF	
	35				OFF	OFF	OFF	ON	
	40				ON	OFF	OFF	ON	
	50				OFF	ON	OFF	ON	
	60				ON	ON	OFF	ON	
	70				OFF	OFF	ON	ON	
	80				ON	OFF	ON	ON	
	90				OFF	ON	ON	ON	
	100				ON	ON	ON	ON	
W-UP GAME STRIP GIRL	NO								OFF
	YES								ON



DIP SW.4		1	2	3	4	5	6	7	8
MIN BET TO START GAME	1	OFF	OFF						
	8	ON	OFF						
	16	OFF	ON						
	32	ON	ON						
JACKIE POOL SETTING	200					OFF	OFF		
	500					ON	OFF		
	800					OFF	ON		
	1000					ON	ON		
PLAYER'S PANEL	A型							OFF	OFF
	B型							ON	OFF
	C型							OFF	ON

DIP SW.5		1	2	3	4	5	6	7	8
POWER ON GAME MODE	GAMBLING	OFF							
	AMUSEMENT	ON							
AMUSEMENT GAME TIME SETTING	30SEC		OFF	OFF					
	60SEC		ON	OFF					
	90SEC		OFF	ON					
	120SEC		ON	ON					
REEL SPEED	SLOW				OFF				
	QUICK				ON				
MAX BET SETTING	16					OFF	OFF		
	32					ON	OFF		
	48					OFF	ON		
	64					ON	ON		
BET LINES	8 LINES							OFF	
	16 LINES							ON	